

HITEC

RDX2 1000

AC/DC DUAL PORT CHARGER
DISCHARGER / POWER SUPPLY



OPERATION MANUAL

WARNING: THE CHARGING AND DISCHARGING OF RC HOBBY BATTERIES CAN BE DANGEROUS. FAILURE TO FOLLOW THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL MAY RESULT IN PROPERTY DAMAGE AND/OR LOSS OF LIFE.

V1.1

TABLE OF CONTENTS

Introduction.....	3
Warnings and Safety Notes.....	4
Contents of Charger Package.....	7
Optional External Discharger.....	7
Charger Layout.....	8
Charger Specifications.....	9
Program Flow Chart.....	10-11
Charger Features.....	12-13
Explanation of Buttons.....	14
Power and Battery Connection.....	15
Charger Operation.....	16-17
Lithium Battery Program (LiPo/LiFe/LiLo/LiHV).....	18-19
NiMH/NiCd Battery Program.....	20-21
Pb Lead-Acid Battery Program.....	21-22
External Discharge.....	23
Charge Master.....	24
Battery Analyzer.....	24-25
DC Power.....	25
Optional Parts.....	26
Charger Settings.....	26
System Settings.....	27
Warning and Error Messages.....	28
Firmware Upgrade Notice.....	29
Conformity Declaration.....	29
Regulatory Information / Compliance.....	30
Warranty, Service and Repair.....	30-31

INTRODUCTION

Congratulations on purchasing Hitec's RDX2 1000 Dual Port Charger / Discharger / Power Supply. The RDX2 1000 features independent circuits allowing you to charge two batteries simultaneously, regardless of chemistry or capacity. The RDX2 1000 also features integrated balancing for six-cell Lithium-Polymer (LiPo), Lithium-Ferrite (LiFe) and Lithium-Ion (LiIo), as well as the latest high voltage Lithium-Polymer (LiHV) batteries.

Although simple to use, the RDX2 1000 does require some basic knowledge for successful and safe operation. The operating instructions included here are designed to ensure that you quickly become familiar with its functions. It is important that you read through this manual in its entirety. Read attentively and completely the Operating Instructions, Warning and Safety Notes BEFORE attempting to use your new charger for the first time.

Please read this entire operating manual before using the RDX2 1000 Charger. If you are unsure of its proper operation after reading the manual, please seek advice from an experienced hobbyist or someone familiar with proper battery charging procedures.



THE CHARGING AND DISCHARGING OF RC HOBBY BATTERIES CAN BE DANGEROUS. FAILURE TO FOLLOW THESE EXPLICIT WARNINGS CAN RESULT IN PROPERTY DAMAGE AND/OR LOSS OF LIFE.

- ⚠ NEVER LEAVE YOUR CHARGER UNATTENDED WHILE IN OPERATION.**
- ⚠ NEVER CHARGE ON OR AROUND COMBUSTIBLE MATERIALS.**
- ⚠ NEVER CHARGE A DAMAGED BATTERY PACK.**
- ⚠ LOW COST, NO-NAME BATTERY PACKS POSE THE MOST DANGER. WE RECOMMEND YOU ONLY USE BATTERY PACKS THAT ARE SOLD AND WARRANTIED BY A REPUTABLE COMPANY.**
- ⚠ IT IS HIGHLY RECOMMENDED THAT YOU UTILIZE A SAFETY DEVICE SUCH AS A STEEL CASE OR LiPo SACK™ WHILE CHARGING LITHIUM CHEMISTRY BATTERIES.**
- ⚠ IT IS HIGHLY RECOMMENDED THAT YOU KEEP AN OPERABLE “CLASS A” FIRE EXTINGUISHER IN THE CHARGING AREA.**

FAILURE TO FOLLOW THESE WARNINGS CAN BE CONSIDERED NEGLIGENCE BY THE OPERATOR AND MAY NEGATE ANY CLAIMS FOR DAMAGES INCURRED.

WARNINGS AND SAFETY NOTES

Hitec Group USA, Inc. (Hitec RCD USA) will not be held responsible for any damages or injuries that may occur by persons who fail to follow these warnings or who fail to properly follow the instructions in this manual.



Warning



Tip

Warning: Be sure to read this section for your own safety.

Tip: This section will help you maximize the performance of your charger.

Note: This section will provide more detailed explanations.



Note



Caution

Caution: Be sure to read this section to prevent accidents and damage to your charger.

These warnings and safety notes are of the utmost importance. You must follow these instructions for maximum safety. Failure to do so can damage the charger and the battery and in the worst cases, may cause a fire.



Warning

NEVER LEAVE THE CHARGER UNATTENDED WHILE IT IS CONNECTED TO ITS POWER SOURCE. IF ANY MALFUNCTION IS FOUND, TERMINATE THE PROCESS AT ONCE AND REFER TO THE OPERATION MANUAL.



The allowable AC input voltage is 100 - 240V AC



The allowable DC input voltage is 11-18V DC.



Keep the charger away from dust, damp, rain, heat, direct sunlight and excessive vibration.



If the charger is dropped or suffers any type of impact, it should be inspected by an authorized service station before using it again.



This charger and the battery should be put on a heat-resistant, non-flammable and non-conductive surface.



Never place a charger on a car seat, carpet or similar surface. Keep all flammable volatile materials away from the operating area.



Make sure you know the specifications of the battery to be charged or discharged to ensure it meets the requirements of this charger. If the program is set up incorrectly, the battery and charger can be damaged.



Fire or explosion can occur due to overcharging.



Never attempt to charge or discharge the following types of batteries:

- A battery fitted with an integral charge circuit or a protection circuit.
- A battery pack which consists of different types of cells (including different manufacturer's cells).

WARNINGS AND SAFETY NOTES

- A battery that is non-rechargeable (these pose an explosion hazard).
- A faulty or damaged battery.
- Batteries installed in a device or which are electrically linked to other components.
- Batteries that are not expressly stated by the manufacturer to be suitable for the currents the charger delivers during the charge process.

PLEASE CHECK THE FOLLOWING POINTS BEFORE YOU BEGIN CHARGING:

- Did you select the appropriate program suitable for the type of battery you are charging?
- Did you set up the adequate current for charging or discharging?
- Have you checked the battery voltage? Lithium battery packs can be wired in parallel and in series, i.e. a 2-cell pack can be 3.7V (in parallel) or 7.4V (in series).
- Have you checked that all connections are firm and secure?
- Make sure there are no intermittent contacts at any point in the circuit.

Standard Battery Parameters

	LiPo	LiIo	LiFe	LiHV	NiMH	NiCd	Pb
Nominal Voltage	3.7V/cell	3.6V/cell	3.3V/cell	3.7V/cell	1.2V/cell	1.2V/cell	2.0V/cell
Max. Charge Voltage	4.2V/cell	4.1V/cell	3.6V/cell	4.35V/cell	1.5V/cell	1.5V/cell	2.4V/cell
Storage Voltage	3.8V/cell	3.7V/cell	3.3V/cell	3.90V/cell	n/a	n/a	n/a
Allowable Fast Charge	≤ 1C	≤ 1C	≤ 4C	≤ 1C	1C-2C	1-2C	≤ 0.4C
Min. Discharge Voltage	3.0-3.3V/cell	2.9-3.2V/cell	2.6-2.9V/cell	3.1-3.4V/cell	0.1-1.1V/cell	0.1-1.1V/cell	1.8~2.0V/cell



Warning

WHEN ADJUSTING YOUR RDX2 1000 CHARGING PARAMETERS, BE SURE YOU SELECT THE PROPER BATTERY TYPE AND CELL VOLTAGE FOR THE TYPE OF CELL YOU ARE CHARGING. CHARGING BATTERIES WITH THE WRONG SETTINGS MAY CAUSE THE CELLS TO BURST, CATCH FIRE OR EXPLODE.

WARNINGS AND SAFETY NOTES

Charging

Before charging your batteries, it is critical that you determine the maximum allowable charge rate for your batteries. The RDX2 1000 is capable of charging at high rates that may not be suitable or safe for your particular batteries. For example, Lithium cells are typically safe to charge at 1C, or the total mAh÷1000. A 1200mAh battery would have a 1C charge rate of 1.2 amps. A 4200mAh battery would have a 1C charge rate of 4.2 amps. Some manufacturers are offering Lithium cells that can be charged at greater than 1C but this should ALWAYS be verified before charging a Lithium battery at rates higher than 1C. Voltage is just as critical as the charging amperage rate and this is determined by the number of cells in series, or “S”. For example, a 3S LiPo is rated at 11.1 volts (“S” multiplied by a single LiPo cell with a nominal voltage of 3.7 volts DC. 3 cells x 3.7 volts each equals 11.1 volts DC).

Connect the battery's main leads to the charger output: Red is positive and black is negative. Keep in mind that the gauge or thickness of your charging leads from the RDX2 1000 to your battery must be of an acceptable current rating to handle the applied charge current. For maximum safety and charging effectiveness, always match or exceed the main battery lead rating when assembling or selecting your charging leads. If you charge a battery at a high current rate (amperage) with a charging lead not rated for the chosen amperage, the wire could get hot, catch fire, short out and/or potentially destroy your battery and the charger. When in doubt, always use a higher gauge wire (lower AWG number). It is common to see charging leads constructed of 14AWG, 16AWG or 18AWG wire.

Always refer to recommendations from your battery manufacturer for your specific battery type and size before initiating a charge or discharge process.

Do not attempt to disassemble or modify ANY battery packs.

Discharging

The RDX2 1000 discharging functions are for two specific purposes:

- Refreshing the capacity of a Nickel-based battery that has lost capacity over time (NiMH or NiCd).
- Reducing the voltage of a Lithium battery for safe storage.



Warning

LITHIUM CHEMISTRY BATTERY PACKS SHOULD ONLY BE DISCHARGED TO THEIR MINIMUM SAFE VOLTAGE, NO LOWER. DEEP DISCHARGING A LITHIUM CELL WILL DO PERMANENT DAMAGE. REFER TO THE STANDARD BATTERY PARAMETERS TABLE ON PAGE 5 OF THIS MANUAL FOR MINIMUM DISCHARGE VOLTAGES.

LiPo & LiHV Charge/Discharge Cycling

Lithium batteries are known to reach full capacity after a break-in period of about 10 charge/discharge cycles. We do not recommend you use the RDX2 1000 charger to do this; normal use and recharging will achieve the same results. If you wish to perform a Lithium break-in on the bench with the RDX2 1000, discharging to minimum acceptable voltages and performing a balance charge at 1C maximum rate is recommended. If you choose to break in your Lithium batteries under normal use, charging at only 1C for the first ten cycles will help ensure full performance and service life from your Lithium cells.

CONTENTS OF CHARGER PACKAGE



1. RDX2 1000 Charger
2. AC Power Cord
3. Parallel Charging Cable
4. 12V Power Cord with 4mm Bullets & Clamps

OPTIONAL EXTERNAL DISCHARGER


Precisely and visually benchmark your battery with the AD350¹ Discharger and its Battery Analyze Software².

AD350 Analyzer & Discharger
Part No. 44405 (Sold Separately)



1. AD350 Discharger needs to be purchased separately.
2. Battery Analyze Software is free to download.

CHARGER LAYOUT

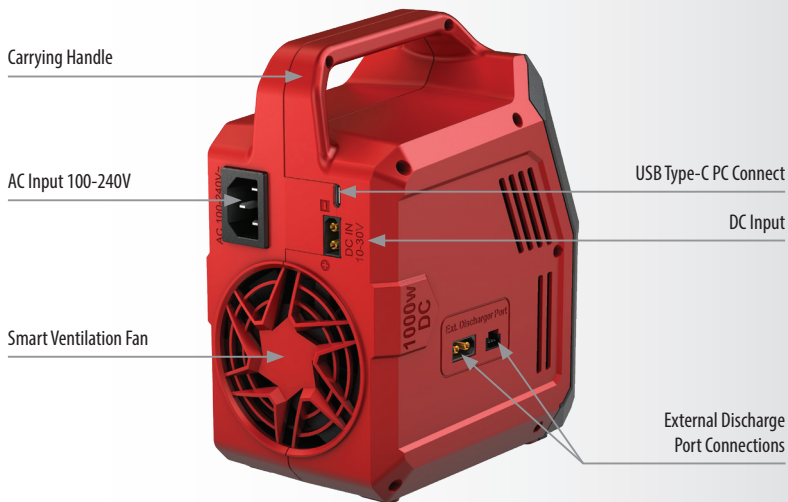

CHARGER SPECIFICATIONS

Item	Option	Specification
Input Voltage	AC	100-240V (50/60Hz)
	DC	10-30V
Input Current		35A MAX
Charge Power	AC	450W MAX
	DC	1000W MAX
Discharge Power	Main Port	10W
	Balance Port	37W MAX
	External Discharge	350W MAX
Charge Current	LiPo/LiFe/LiLo/LiHV/NiMH/ NiCd/Pb	0.1-20.0A
	Parallel	20.0-35.0A
Discharge Current	LiPo/LiFe/LiLo/LiHV/NiMH/ NiCd/Pb	0.1-2.0A
	External Discharge <i>*Using Hitec AD350 Discharger - Sold Separately.</i>	0.1-40.0A
Balance Current	LiPo/LiFe/LiLo/LiHV	1.5A MAX
Battery Type	LiPo/LiFe/LiLo/LiHV	1-6S
	NiMH/NiCd	4-15S
	Pb	3S/6S/12S
Operation	LiPo/LiFe/LiLo/LiHV	Balance, Charge, Discharge, Storage, Parallel Cycle
	NiMH/NiCd	Charge, Cycle, Re-peak, Discharge
	Pb	Normal, AGM Charge, Cold Charge, Discharge
DC Output	Voltage	5-27V
	Current	1.0-15.0A
Size	L x W x H	7.5 x 6.0 x 3.9 in.
Net Weight		3.0 lbs.

CHARGER FEATURES

Twin-Channel Charger:

Hitec's RDX2 1000 allows you to plug two batteries into the charger simultaneously. The batteries being charged do not need to have the same configuration. You can connect different battery chemistries (NiMH/ NiCd/LiPo/LiFe/Lilo/LiHV/Pb) into any of the charging ports.

Internal Independent Lithium Battery Balancer:

The RDX2 1000 employs an individual-cell-voltage balancer.

Independent Cell Balancing While Discharging:

During the discharge process, the RDX2 1000 monitors and balances each cell of the battery individually. If the voltage of any single cell reads abnormally, an error message will display and end the process automatically.

Adaptable to Various Types of Lithium Batteries:

The RDX2 1000 will charge a variety of Lithium batteries such as LiPo, LiFe, Lilo and the new higher voltage LiHV batteries.

Multiple Lithium Battery Charge Modes

Balance Charge:

In this mode, each cell is monitored and if some are at higher voltages than the others, they are discharged to equalize the voltage between all the cells and keep the pack in optimum condition. We highly recommend using Balance Charge as it is the safest and best way to charge Lithium batteries.

Charge:

This mode charges the pack without balancing the cells. Connecting the balance lead is still recommended so you can monitor each cell's voltage manually by scrolling to the left with the Jog Dial.

Note: If the cells are more than 0.02V off from each other, Balance Charge should be used to equalize the pack.

Storage:

This mode charges or discharges the pack to 50% capacity so that it can be safely stored when not in normal use. If you do NOT plan on using your Lithium pack within 24-48 hours of being fully charged or fully discharged, Storage Mode is recommended to optimize maximum lifespan and performance and reduce the risk of the gases forming, causing the pack to puff.

Terminal Voltage Control (TVC):

For experienced users ONLY, the charger's end voltage can be reset up to 0.05v/cell higher.



Default setting is recommended. ONLY change in a controlled environment. ALWAYS monitor the battery during the charge process.

Warning

Cyclic Charging / Discharging:

A battery can be cycled 1 to 5 times consecutively. This process is normally used for NiCd or NiMH packs that have lost capacity over time. It can also be used with LiPo & LiHV packs in conjunction with the AD350 Discharger to decrease internal resistance for more power in stock racing.

Re-Peak Mode of NiMH/NiCd Batteries:

In Re-Peak charge mode, the charger can peak charge the battery once, twice, or three times in a row automatically. This function is useful for ensuring a full battery charge.

Delta-Peak Sensitivity for NiMH/NiCd:

This function determines the amount of voltage drop in MV that must be achieved for the Delta-Peak algorithm to automatically terminate the charge process. This can be raised for packs that have a tendency to “False Peak” at the default setting.

Battery Resistance Meter:

The user can check not only the MAIN pack voltage but each individual cell and its resistance as well.

Capacity Cut-Off Limit:

This feature allows the user to set a limit for the maximum mAh's that can be put into the pack. Once this limit is reached, the charge process will automatically terminate, and “OVER CHARGE CAPACITY LIMIT” will be displayed. Default is 12000mAh, so set this accordingly to the rated capacity of the pack. To ensure the pack gets fully charged, this setting should be at least 10% higher than the rated capacity on the pack or turned OFF

Safety Timer:

Protect your battery by setting a maximum time limit for charging. Once this limit is reached, the charge process will automatically terminate, and “OVER TIME LIMIT” will be displayed. Default is 240 minutes, so adjust as needed depending on the charge rate and capacity of the pack.

Battery Charge Percentage:

The battery charge percentage is displayed in real time once you are charging.

Power Supply:

With the built in Power Supply function, you can power devices with up to 27V @ 15A.





Note

NOTE: IF THE POWER SUPPLY FUNCTION IS ACTIVATED, CHARGING IS DISABLED.


PROGRAM FLOW CHART

Note: The Flow Chart shows one port (Port A) as the example. The Flow Chart for Port B is identical.

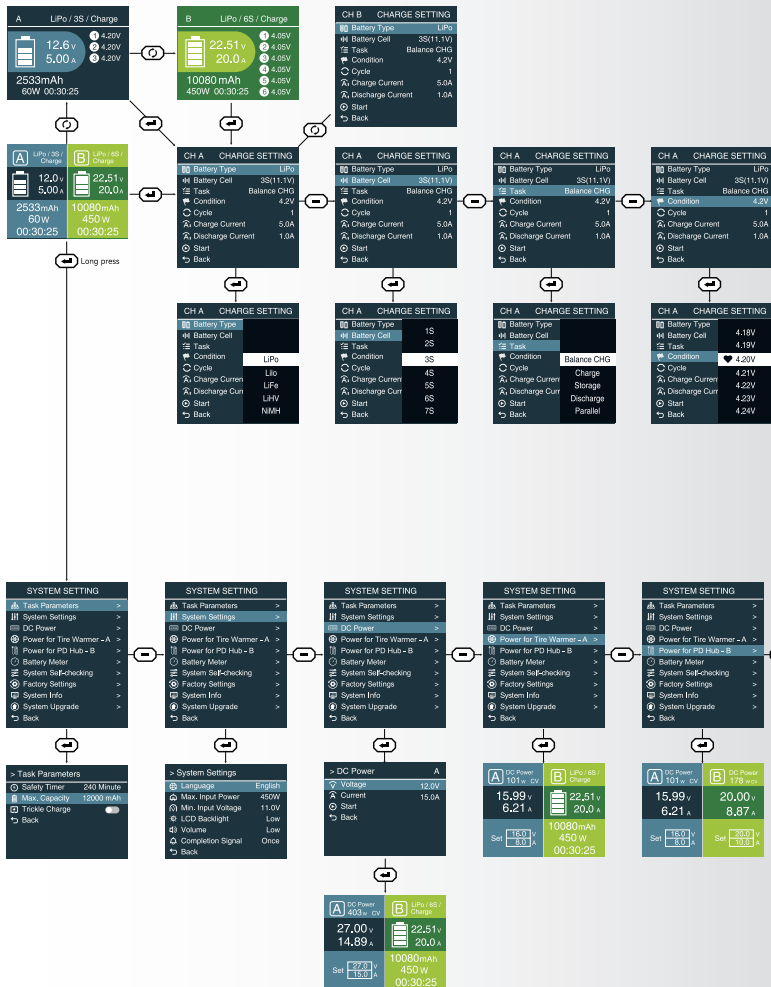

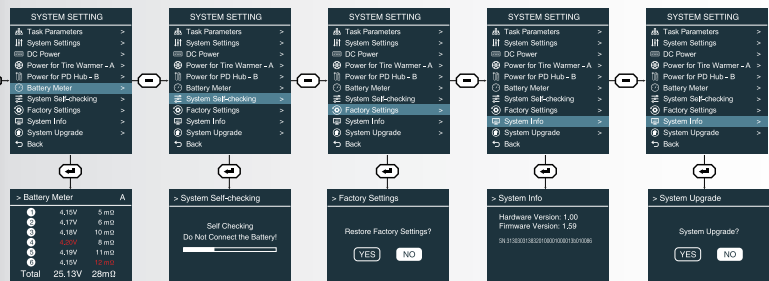

EXPLANATION OF BUTTONS

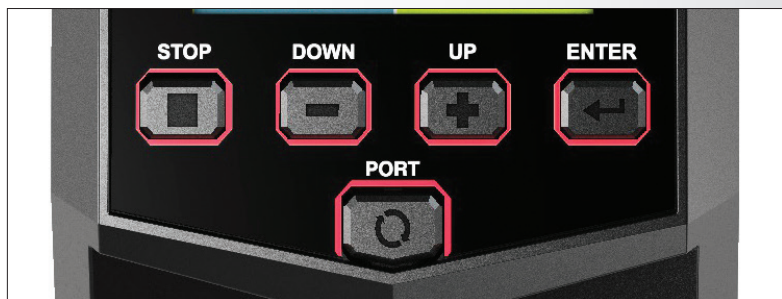

PORT:

Toggle between Port A and B.



STOP:

Stop the progress or return to a previous step or screen.



DOWN:

Navigate through the menus or decrease a parameter value.



UP:

Navigate through the menus or increase a parameter value.



ENTER:

Enter or store the parameters on screen, and start the program.

To alter the parameter value in the program, press the ENTER button to call out the options menu then change the value by pressing the DOWN or UP buttons.

The value will be confirmed and stored by pressing the ENTER button.

To start the process, select the option of ENTER.

Press and hold the ENTER button for three seconds to enter into the system setting.



Warning

BEFORE YOU BEGIN CONNECTING YOUR BATTERY, MAKE SURE YOU HAVE READ AND UNDERSTOOD ALL OF THE WARNINGS AND SAFETY INFORMATION CONTAINED IN THIS MANUAL.

POWER AND BATTERY CONNECTION

1. Connecting to a power source

There are two options of inputs for the RDX2 1000, DC 10-30V and AC 100-240V.

AC 100-240V power source connection. 12V DC Battery / DC power supply connection.



2. Connecting the battery



Warning

TO AVOID SHORT CIRCUITS, ALWAYS CONNECT THE CHARGE LEADS TO THE CHARGER FIRST, AND THEN TO THE BATTERY. REVERSE THE SEQUENCE WHEN DISCONNECTING THE PACK.

i. LiPo Battery Connection



For safety reasons, it is highly recommended to charge Lithium batteries (LiPo, Lilo, LiFe and LiHV) using Balance CHG mode, unless the battery comes without a balance wire.

The balance wire attached to the battery must be connected to the charger with the black wire aligned with the negative marking. Ensure correct polarity!

ii. NiMH/NiCd or Pb Battery Connection



CHARGER OPERATION

Initial Setup of the Charger

After connecting the battery, you are now ready to setup the charger to charge your specific type of battery. When the charger is first powered on, the last program selected will be displayed. If this is not the battery you plan on working with, then you will need to make changes to the operation programming based on the following instruction.



Warning

BEFORE SELECTING AN OPERATION, IT IS CRITICAL THAT YOU KNOW THE TYPE OF BATTERY YOU ARE WORKING WITH AND WHAT THE MANUFACTURER RECOMMENDATIONS ARE FOR CHARGING OR DISCHARGING. FAILURE TO FOLLOW THE MANUFACTURER'S RECOMMENDATIONS CAN RESULT IN DAMAGE TO THE BATTERY AND CREATE AN EXPLOSION HAZARD.

Available Operations

Depending on battery type, different operations will be available. This chart shows which operations are available for the different types of batteries the RDX2 1000 is capable of working with.

Battery Type	Operation	Operation Description
LiPo Lilo LiFe LiHV	Balance CHG	This mode is to balance charge the lithium battery based on the charging rate. It can balance each cell of the battery.
	Charge	This mode is to charge the lithium battery based on the charging rate selected.
	Storage	This mode is to store the battery via charging or discharging its voltage to a specific storage value.
	Discharge	This mode is to discharge the lithium battery based on the discharging rate selected.
	Parallel	This mode is to parallel charge the battery with a higher charge rate of up to 35.0A.
	Cycle	This mode is to cycle discharge>charge the lithium battery to get the maximum power of the battery. It's only available under the Balance CHG & Parallel charge mode for the lithium battery.

CHARGER OPERATION

Available Operations (continued)

Battery Type	Operation	Operation Description
NiMH NiCd	Charge	This mode is to charge the NiMH/NiCd battery based on the charging rate selected.
	Re-Peak	In re-peak charge mode, the charger can peak charge the battery twice in a row automatically. This is good for confirming the battery is fully charged, and for checking how well the battery receives fast charges.
	Cycle_C_D	1 to 5 cyclic and continuous process of charge>discharge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	Cycle_D_C	1 to 5 cyclic and continuous process of discharge>charge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	Discharge	This mode is to discharge the NiMH/NiCd battery based on the discharging rate selected.
Lead Acid Pb	Normal	This mode is to charge the Pb battery based on the charging rate selected.
	AGM Charge	This mode is to charge the AGM battery based on the charging rate selected.
	Cold Charge	This mode is to charge the Pb battery under a low temperature based on the charging rate selected.
	Discharge	This mode is to discharge the Pb battery based on the discharging rate selected.




Warning

BEFORE YOU BEGIN CHARGING YOUR BATTERY, MAKE SURE YOU HAVE READ AND UNDERSTOOD ALL OF THE WARNINGS AND SAFETY INFORMATION CONTAINED IN THIS ENTIRE MANUAL.


LITHIUM BATTERY PROGRAM (LiPo/LiFe/LiIo/LiHV)

The following flow chart is a reference to set the program settings.

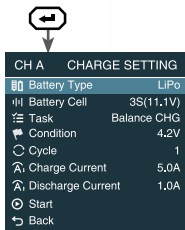


ENTER Charge Setting

On the main interface, press the ENTER button to enter CHARGE SETTING.

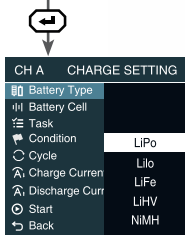


Battery Type Select

Press the ENTER button to call out the battery type menu, and select LiPo.

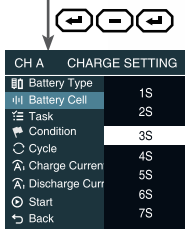


Battery Cell Select

Press the DOWN button to the option of Battery Cell, press the ENTER button to call out the menu, and select the correct battery cells.

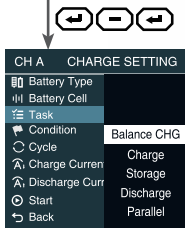


Task Select

Press the DOWN button to the option of Battery Cell, press the ENTER button to call out the menu, and select the correct battery cells.

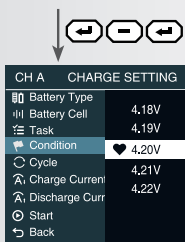

Condition Select


Press the DOWN button to the Condition, call out the menu and select the terminal charging voltage (The default of 4.20V is recommended).

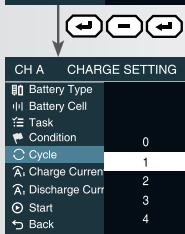

Cycle Mode


Press the DOWN button to the Cycle, call out the menu and select cycle counts. The cycle mode will only work when the cycle counts are selected.

Note: The cycle option is available only for Balance CHG and Parallel charge modes.

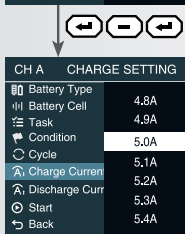

Charge Current Select


Press the DOWN button to the Charge Current, call out the menu, and set the charge current.

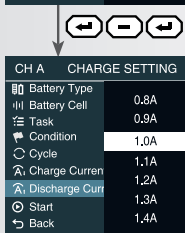

Discharge Current Select

Press the DOWN button to the Charge Current, call out the menu, and set the discharge current.

Note: This function is only available in Discharge Mode.

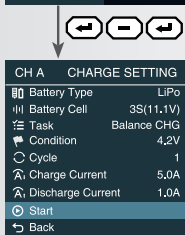

Start Charge Process

Press the DOWN button to the Start function and the ENTER button to begin.

Note: Cycle mode will discharge first and then charge. At the end of the process, the battery will be ready to use.

NiMH/NiCd BATTERY PROGRAM



The following flowchart is a reference to set the program manually.

CH A CHARGE SETTING	
Battery Type	NiMH
Battery Cell	6S(7.2V)
Task	Charge
Condition	-6ΔmV
Charge Current	3.0A
Temp Cut-off	50°C
Start	
Back	



CH A CHARGE SETTING	
Battery Type	LiIo
Battery Cell	LiFe
Task	LiHV
Condition	NiMH
Charge Current	
Temp Cut-off	NiCd
Start	PB
Back	



CH A CHARGE SETTING	
Battery Type	3S
Battery Cell	4S
Task	5S
Condition	6S
Charge Current	
Temp Cut-off	7S
Start	8S
Back	9S



CH A CHARGE SETTING	
Battery Type	
Battery Cell	
Task	Charge
Condition	
Charge Current	Re-Peak
Temp Cut-off	CYCLE_C_D
Start	CYCLE_D_C
Back	



CH A CHARGE SETTING	
Battery Type	-3mV
Battery Cell	-4mV
Task	-5mV
Condition	-6mV
Charge Current	-7mV
Temp Cut-off	-8mV
Start	-9mV
Back	

ENTER Charge Setting

On the main interface, press the ENTER button to enter CHARGE SETTING.

Battery Type Select

Press the ENTER button to call out the battery type menu, and select NiMH.

Battery Cell Select


Press the DOWN button to the option of Battery Cell, press the ENTER button to call out the menu, and select the correct battery cells.

Task Select

Press the DOWN button to the Task, call out the menu, and select the working mode. The working modes are Charge, Re-Peak, CYCLE_C_D, CYCLE_D_C and Discharge.

Condition Select


Press the DOWN button to the Condition, call out the menu, and set the delta voltage (The default is recommended).



CH A CHARGE SETTING	
Battery Type	2,7A
Battery Cell	2,8A
Task	2,9A
Condition	3,0A
Charge Current	3,1A
Temp Cut-off	3,2A
Start	3,3A
Back	

Charge/Discharge Current Select

Press the DOWN button to the Charge/Discharge Current, call out the menu, and set the charge/discharge current.




CH A CHARGE SETTING	
Battery Type	47
Battery Cell	48
Task	49
Condition	50
Charge Current	51
Temp Cut-off	52
Start	53
Back	

Temp Cut-off Setting

Press the DOWN button to the Temp Cut-off, call out the menu and set the cut-off temperature.

Note: Optional Hitec Charger Temp Sensor sold separately (Part No. 44159).




CH A CHARGE SETTING	
Battery Type	NiMH
Battery Cell	6S(7.2V)
Task	Charge
Condition	-6ΔmV
Charge Current	3,0A
Temp Cut-off	50°C
Start	
Back	

Start Charging/Discharging

Press the DOWN button to the Start, and confirm to initiate the charging/discharging.

Pb LEAD-ACID BATTERY PROGRAM


The following flowchart is a reference to set the program manually.



CH A CHARGE SETTING	
Battery Type	PB
Battery Cell	6S(12.0V)
Task	AGM Charge
Condition	2,45V
Current	5,0A
Start	
Back	


ENTER Charge Setting

On the main interface, press the ENTER button to enter CHARGE SETTING.

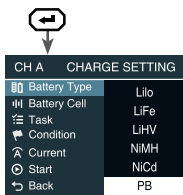


Battery Type Select

Press the ENTER button to call out the battery type menu, and select PB.

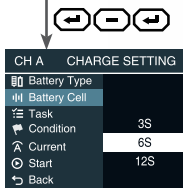


Battery Cell Select

Press the DOWN button to the option of Battery Cell, press ENTER button to call out the menu, and select the correct battery cells.

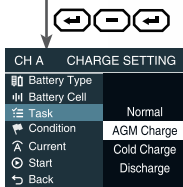

Task Select


Press the DOWN button to the Task, call out the menu, and select the working mode. The working modes are Normal, AGM Charge, Cold Charge, and Discharge.

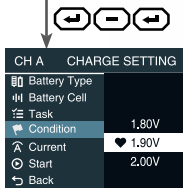

Condition Select


(*Only available in Discharge mode)

Press the DOWN button to the Condition, call out the menu and select the terminal discharging voltage.

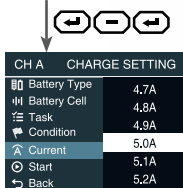

Charge/Discharge Current Select

Press the DOWN button to the Charge/Discharge Current, call out the menu, and set the charge/discharge current.

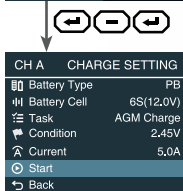

Start Charging/Discharging

Press the DOWN button to the Start, and confirm to initiate the charging/discharging.

EXTERNAL DISCHARGE

The RDX2 1000 is capable of discharging up to 40.0A when the external AD350 Discharger is connected.


1. Connect the power supply to the RDX2 1000 Charger. The main menu screen will appear automatically.
2. Connect the AD350 Discharger to the RDX2 1000.



3. Connect the battery to the RDX2 1000 on Port A or in Parallel for high charge rate cycling.



4. Select Discharge: Set the cut-off voltage, the discharge current, and the number of cells.
5. Start the program after setting up by pushing the ENTER button.

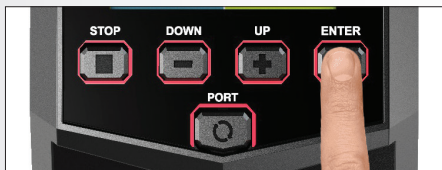

Notice:

- The AD350 Discharger is not included and must be purchased separately.
- External discharge is available only on Port A or cycle function in parallel.

CHARGE MASTER

RDX2 1000 is capable of charging and discharge monitoring through the computer. Various parameters, including charge time and capacity, can be displayed visually, as well as charge current and voltage in a curve.

In addition, battery performance can be analyzed through the Charge Master.

1. Download the latest Charge Master onto your desktop. Unzip and open it to install after downloading.
2. Power on your RDX2 1000.




3. Connect the RDX2 1000 to your computer via a USB type-C cable.
4. On the top left of the Charge Master, choose the option of Charge.
5. Set the parameters on the corresponding ports. Click to start the program after setting up.

BATTERY ANALYZER

RDX2 1000 is capable of analyzing the battery performance with the AD350 Discharger connected.

1. Launch the Charge Master and select Battery Analyzer on the top left.

Select →

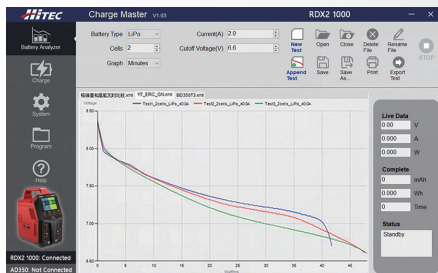

2. Specify the battery type, discharge current, cut-off voltage, and other parameters.
3. Click New Test to start the testing after setting up.
4. When the first test completes, click Append Test to start the second test. The third and further tests follow suit.

Up to ten groups of test data are visualized as curves, which are clear at a glance for users.

DC POWER

1. On the main interface, hold the ENTER button for a few seconds to enter the system setting.
2. Select the option of DC Power, then adjust the output voltage and current.

> DC Power	A
∨ Voltage	12.0V
∧ Current	15.0A
⊙ Start	
↶ Back	

3. Press Start to activate the power function after setting up.
4. Connect your desired DC equipment.



Notice:

- On the DC Power interface, press the Port button to toggle between A/B ports.



Warning

PLEASE MAKE SURE THERE IS NOTHING CONNECTED TO THE PORT BEFORE SELECTING THIS SETTING.

OPTIONAL PARTS



AD350 Analyzer & Discharger

Part No. 44405



XT60 to EC3 Charging Connector

Part No. 44180



XT60 to EC5 Charging Connector

Part No. 44182



XT60 to 4 or 5mm Bullet w/XH



























Part No. 44183

CHARGER SETTINGS

On the main interface, press the ENTER button to enter charging settings, in which you can toggle between A/B ports by pressing the Port button.

Menu	Definition
Battery Type	Select your desired battery type (LiPo, Lilo, LiFe, LiHV, Pb, NiMH, NiCd).
Battery Cell	Select the number of battery cells corresponding to the battery type (Li-xx: 1-6S, Ni-xx: 1-15S, Pb: 3S/6S/12S).
Task	Select the program to be performed (Balance CHG, Charge, Storage, Discharge, Parallel, etc.).
Condition	Set the cut-off voltage as per the task.
Current	Set the charge or discharge current.
Start	Start the current program.
Back	Back to the main interface.

SYSTEM SETTINGS

Menu		Option	Specification
	Task Parameters	 Safety Timer	Customize a period for program protection.
		 Max. Capacity	Customize the protection of capacity.
		 Trickle Charge	Enable / disable trickle charge.
		 Back	Back to the previous interface.
	System Settings	 Language	Select your desired system language.
		 Max. Input Power	The maximum charge power AD Input: 450W DC Input: 1000W
		 Min. Input Voltage	In DC Input, set the minimum voltage for input protection.
		 LCD Backlight	Adjust the brightness of the screen.
		 Volume	Adjust the volume of the key and beep.
		 Completion Signal	Choose the way you'd like to be reminded when the program completes.
		 Back	Back to the previous interface.
	DC Power	 Voltage	Set the output voltage (5.0-27.0V).
		 Current	Set the output current (1.0-15.0V).
		 Start	Enable DC power output and return to the main interface.
		 Back	Back to the previous interface.
	Power for Tire Warmer - A	N/A	Activate to power the after market Tire Warmer on Port A.
	Power for PD Hub - B	N/A	Activate to power the after market PD Hub on Port B.
	Battery Meter	N/A	Measure the battery voltage and internal resistance (Toggle between A/B ports by pressing the Port button).
	System Self-checking	N/A	
	Factory Settings	N/A	Restore to the factory settings.
	System Info	N/A	Check the current system status.
	System Upgrade	N/A	Upgrade the system.
	Back	N/A	Back to the previous interface.

WARNING AND ERROR MESSAGES

In the event of a fault, the charger will display an error message and sound an alarm.

Error Message	Explanation
Error: DC Input Low!	DC input voltage is lower than preset!
Error: DC Input High!	DC input voltage is higher than preset!
Error: Battery Break!	The battery may be damaged or discharged too low!
Cell Error	The cells do not match.
Battery Type Error!	The battery type is wrong!
Error: Overcharge!	The battery is overcharged!
Error: Over Time!	The program is timed out!
Error: Internal Temp. Too High!	The internal temperature is high!
Error: Battery Temp. Too High!	The battery temperature is high!
Error: Over Load!	The charger is overloaded!
Error: Reversed Polarity	The battery connection is reversed.
Error: Fully Charged	The battery is fully charged already!
Error: Outlet Overload	The output is overloaded.
Error: Balance Connection Break	The balance connection is disconnected.
Error: Cell Volt Diff.	The voltage difference between each cell is high.
Error: AC to DC Too Low!	The input voltage is too low.
Error: Power Setting Error	The DC power setting is incorrect.

FIRMWARE UPGRADE NOTICE

To recover from a firmware upgrade failure, please follow these steps:

1. Hold the STOP and ENTER buttons simultaneously, then connect the power cord; the RDX2 1000 will power on with a blue screen notice.
2. Connect RDX2 1000 to your computer via a Type-C USB cable.
3. Launch the Charge Master on your computer.
4. When the status shows CONNECTED, click to check for new firmware.
5. Click to upgrade after detecting a new firmware.
6. Wait for the progress bar to finish and reach 100%.

The process will take about 5 minutes.

CONFORMITY DECLARATION

RDX2 1000 satisfies all relevant and mandatory CE directives and FCC Part 15 Subpart B.

Test Standards	Title	Result
EN 60335-1	Household and similar electrical appliances - Safety - Part 1: General requirements	Conform
EN 60335-2-29	Household and similar electrical appliances – Safety – Part 2-29: Particular requirements for battery chargers.	Conform
EN 55014-1	Electromagnetic compatibility – Requirements for household appliances, electric tools and similar apparatus - Part 1: Emission	Conform
EN 55014-2	Electromagnetic compatibility – Requirements for household appliances, electric tools and similar apparatus – Part 2: Immunity Product Family Standard	Conform
EN 61000-3-2	Electromagnetic compatibility (EMC) – Part 3-2: Limits for harmonic current emissions (equipment input current up to and including 16 A per phase)	Conform
EN 61000-3-3	Electromagnetic compatibility (EMC) - Part 3-3: Limitation of voltage supply systems for equipment with rated current \leq 16 A.	Conform
FCC Part Subpart 15B	Title 47 Telecommunication PART 15 - RADIO FREQUENCY DEVICES Subpart B - Unintentional Radiators	Conform

REGULATORY INFORMATION / COMPLIANCE

FCC Note - This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Hitec's RDX2 1000 complies with FCC Part 15 Subpart B: 2019.

WARRANTY, SERVICE AND REPAIR

LIABILITY EXCLUSION

This charger is designed and approved exclusively for use with the types of batteries stated in this Operation Manual. Hitec RCD USA accepts no liability of any kind if the charger is used for any purpose other than that stated. We are unable to ensure that you follow the instructions supplied with the charger, and we have no control over the methods you employ for using, operating and maintaining the device. For this reason, we are obliged to deny all liability for loss, damage or costs which are incurred due to any misuse or operation of our products. Unless otherwise prescribed by law, our obligation to pay compensation, regardless of the legal argument employed, is limited to the invoice value of Hitec RCD USA products which were immediately and directly involved in the event in which the damage occurred.

ONE YEAR LIMITED WARRANTY

For a period of one year from the date of purchase, HITEC RCD USA shall REPAIR OR REPLACE, at our option, defective equipment covered by this warranty. Otherwise, the purchaser and/or consumer is responsible for any charges for the repair or replacement of the charger. This warranty does not cover cosmetic damages and damages due to acts of God, accident, misuse, abuse, negligence, improper installation, or damages caused by alterations by unauthorized persons or entities. This warranty only applies to the original purchaser of this product and for products purchased and used in the United States of America, Canada and Mexico. Plastic cases are not covered by this warranty.

THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND WHETHER EXPRESS OR IMPLIED. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY. HITEC RCD USA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY RELATING TO THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY, REPAIR AND SERVICE.



Note

THE RDX2 1000 CHARGER WARRANTY IS VOID IF SOLD AND/OR OPERATED OUTSIDE THE UNITED STATES.

SERVICE AND REPAIR INFORMATION - To have your Hitec charger serviced:

1. Visit the Hitec website at **www.hitecrd.com** and download the service request form.
2. Fill out the service request form completely and include a copy of your original receipt showing the purchase date.
3. Package your product in its original packaging or use a suspension-type packaging (foam peanuts or crumpled newspaper). Hitec RCD USA shall not be responsible for goods damaged in transit.
4. Ship prepaid (COD or postage-due returns will not be accepted) via a traceable common courier (UPS, insured parcel post, FedEx, etc.):

Hitec RCD USA / Customer Service Center, 9320 Hazard Way, Suite D. San Diego, CA 92123



This symbol indicates that when this type of electronic device reaches the end of its service life, it cannot be disposed of with normal household waste and must be recycled. To find a recycling center near you, refer to the internet or your local phone directory for electronic waste recycling centers.

STATE OF CALIFORNIA PROPOSITION 65 WARNING:

This product contains chemicals known to the State of California to cause cancer. Use caution when handling this product and avoid exposure to any electronic components or internal assemblies.

This manual is subject to change without notice.
Please refer to the Hitec RCD USA website for the latest version.
www.hitecrd.com

Made in China (BC)
CE UK FC RoHS



RDX2 1000 OPERATION MANUAL

Hitec RCD USA | 9320 Hazard Way Suite D, San Diego, CA 92123
(858)748-6948 | www.hitecrcd.com